


# HAND SANITIZER STAND


This stand is designed to work with touch free dispensers only. It will work with most touch free dispensers up to 6-3/4" wide. It is recommended that you use a drip tray available for most dispensers to reduce the chance of drips on the rack which may cause discoloration in the wood.

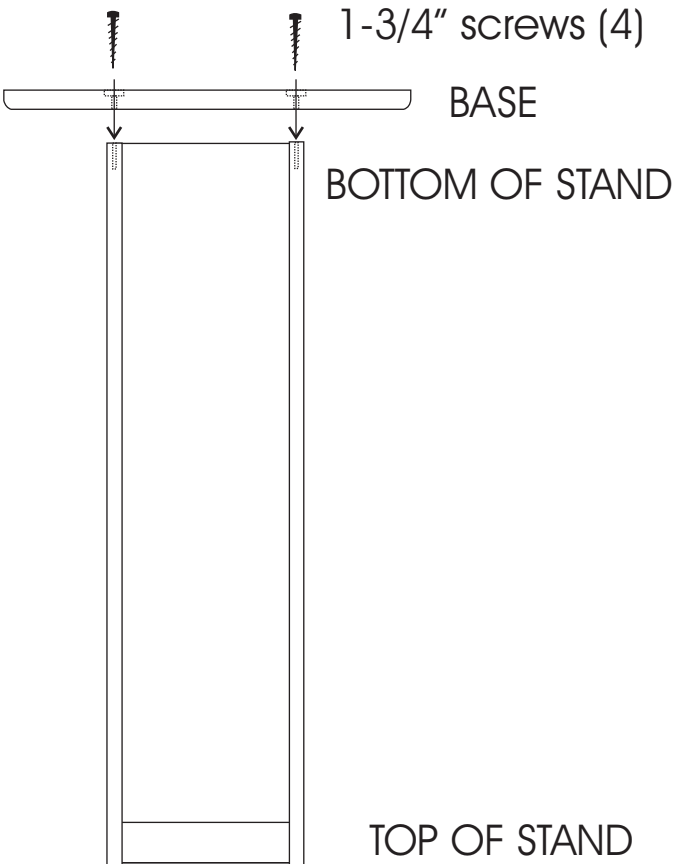

## Hardware included:

- (4) 1-3/4" screws for attaching base
- (2) 3/4" screws for attaching dispenser

Mounting holes.

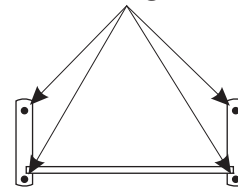

BOTTOM OF STAND

1. Hold the stand upside down on a padded floor.
2. Place the base on the stand upside down, with small holes facing the stand.
3. Align holes in the base with holes in the bottom of the stand.
4. Start the long screws by turning only 1 turn each until all 4 screws are started. Make sure the screws are started in the pre-drilled holes or the sides will crack.
5. Tighten all 4 screws until snug. (Do not over tighten.)
6. Carefully turn the rack right side up and attach your dispenser according to the dispenser's instructions. When using screws to attach the dispenser, use the small 3/4" screws provided, and only screw into solid oak strip on the top end of the stand.